



Table des matières

General overview	2
Provisioning of the device	3
On-site installation	4
External probe installation (THY-LAB-14NS)	4
Indoor installation (THY-LAB-41NS)	4
Device positioning	5
Device mounting	5
Activation of the device	6
LED Status meaning	7
Deactivation of the device	7
Understand the two SenlabH functional modes	8
Basic mode (or standard mode)	8
Datalog mode	9
Application features (datalog mode)	10
Measure data	10
Event data	10
Configuration requests	10
Thresholds overrun (FW >= V2.x.x)	11
Configuration requests	12
Event data (Alarm)	13
Battery replacement (Indoor version only)	14
Technical characteristics	15
ISM Radio bands usage	15
V1.0.3 LoRaWan stack compliant	15
LoRaWan Adaptive Data Rate (ADR)	15
Electrical safety	15
Ambient temperature of use	15
Legals	16

Thank you for your choosing our Senlab product!
We hope you will find the instructions on this user manual clear and easy to follow.

General overview

The Senlab THY (SenlabH) sensor is a smart LoRaWAN™ radio device with a high precision temperature/humidity sensor (see table for accuracy).



SenlabH logs the temperature and the relative humidity of the air (RH) and allows 2 functional modes (see Understand the two SenlabH functional modes section for more details):

- **Basic** (also called “Standard”): Periodic “log and transmit”
- **Datalog**: Periodic logs (up to 24 logs) and “all in one” transmission

The indoor version is designed for office comfort monitoring, whereas, the outdoor version is made for harsh environment use.

Advanced threshold detection is available since v2.0 (see Thresholds overrun (FW >= V2.x.x)Thresholds overrun (FW >= V2.x.x)).

Check [“SenlabV2” Application Note](#) for V2.0 full specs: network migration, re-join...

Part number	TH Probe	Measure Ranges	Casing type	Protection level	Dimension
THY-LAB-14NS	50cm cable	-40°C to +125°C 0%RH to +100 %RH No RH if temperature <0°C	Outdoor	IP68	102x56x35mm probe: 52.3mm Ø15.4mm
THY-LAB-41NS	Inside	0°C to +55°C 20%RH to +80 %RH	Indoor	IP30	91.5x50x25mm

Part number	Measure	Typical accuracy	Conditions
THY-LAB-14NS	Temperature	±0.1°C	+20°C to +60°C
	Temperature	±0.2°C	-40°C to +20°C and +60°C to +90°C
	Temperature	±0.3°C	+90°C to +125°C
	Relative Humidity	±1,5 %RH	+5°C to +65°C and 0%RH to +80 %RH
	Relative Humidity	±2 %RH	0°C to +80°C and +80%RH to +100 %RH +65°C to +80°C and 0%RH to +100 %RH
THY-LAB-41NS	Temperature	±0.3°C	0°C to +55°C
	Relative Humidity	±2 %RH	10°C to +55°C and 20%RH to +80 %RH



Outdoor



Indoor




Warning, take care to respect the operating conditions of the **senlab itself**:

- outdoor version : -20°C to +70°C (the transmitter casing, not the probe) ©2021 Sensing-labs

- indoor version : 0°C to +55°C and 20%RH to 80%RH (non-condensing)

Warning, not for use in salt water or other corrosive environments.

3 steps are required to make your SenlabH fully operational, described below.

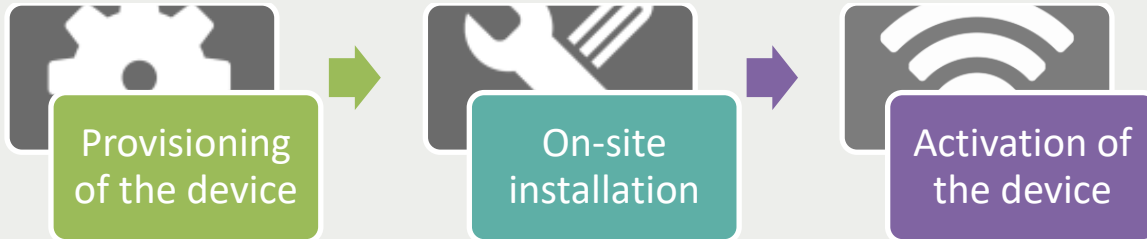

Provisioning of the device

You have to be sure that your **Senlab device has been well commissioned** to be able to reach your LoRaWAN network.

- ✓ Contact if needed your distributor to get your Senlab configuration
- ✓ Required information for provisioning the device into your LoRa system are listed in the following table:



Warning, don't unprovision device from your system before stopping it!
(refer application features to stop the application via RF)



About network configuration:

- if OTAA (by default): **devEUI**, **appEUI** and **appkey** are required
if ABP: **devAddress**, **nwkSkey** and **appSkey** are required
- Senlab can be fully configured to fit to all network configurations:
OTAA or ABP, rf PUBLIC or rf PRIVATE, additional channels list...
- Network & Application configuration of Senlab device can be done:
 - At factory (for minimal batch of 1000 devices)
 - By your distributor (more often)
 - By yourself (if you have your own SLsetting tool)
- **All application configuration can also be dynamically adjusted Over The Air** (via downlink request)
- Please refer to parameter list described into the Application features chapter to fit to your use case and get a "Plug&Play" device.


On-site installation

A natural airflow over the sensor is needed: keep free area around the probe.

External probe installation (THY-LAB-14NS)

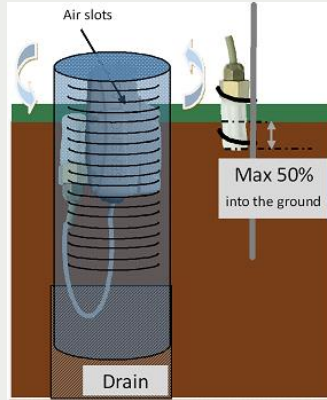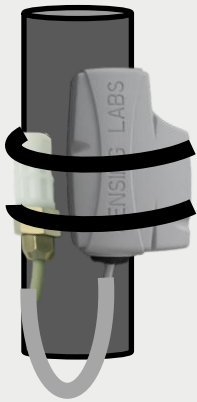

On the soil surface

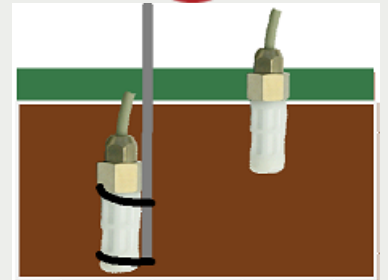

Into the ground


Ambient humidity & temperature

- Keep free area around the probe
- Mounting on a post for example

- Take care to keep airing zone around the probe

- No free area around the probe

Indoor installation (THY-LAB-41NS)

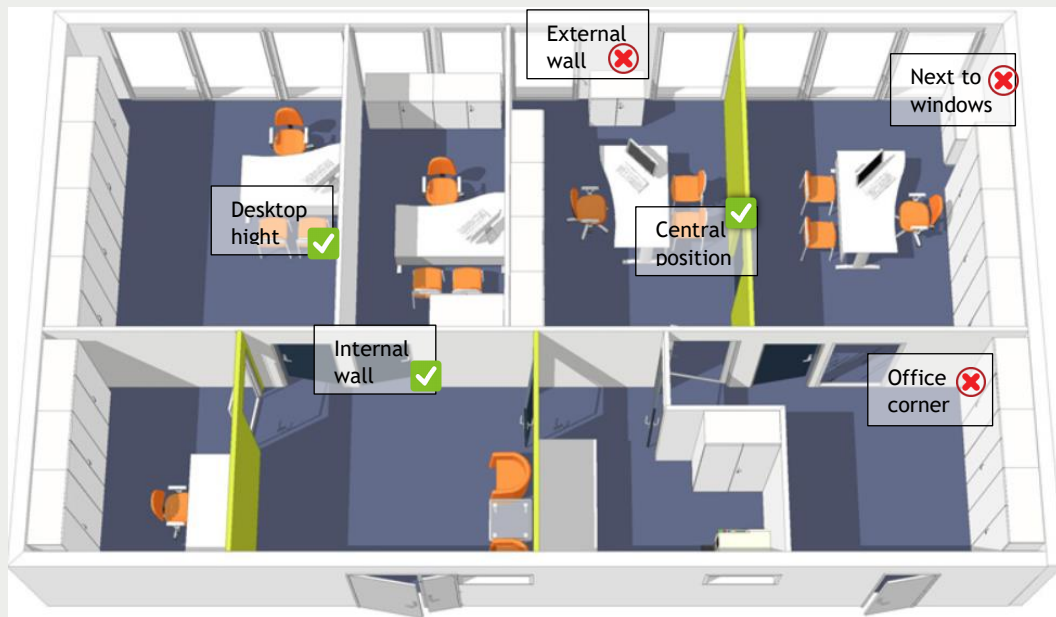

Device positioning

You have first to find the best position to your Senlab:

- ✓ Prefer vertical position (**antenna part upwards** as on following pictures)
- ✓ Avoid positioning the external cable pulled vertically under the device (prefer coiled positioning or use the rear gutters for outdoor version)
- ✓ Avoid direct sun light exposure or heater system proximity



Device is not designed for an installation above 2 meters.

Device mounting

Device type	Device mounting
All versions	Stick the product to the wall or cabinet with a double-sided adhesive tape
Indoor versions	Screw the rear side of the product to the wall with countersunk screws make sure the screw heads don't exceed from the plastic side once installed
Outdoor versions	Use plastic cable ties with screw mount

Refer to « [Application Note Senlab installation](#) » for full recommendation.




For best radio performance:

- Positioned the upper part of the device upwardly in a free space area
- avoid positioning the Senlab against a metallic element

Activation of the device

To activate the Senlab device, you have to use a magnet (min pulling force 1Kg).

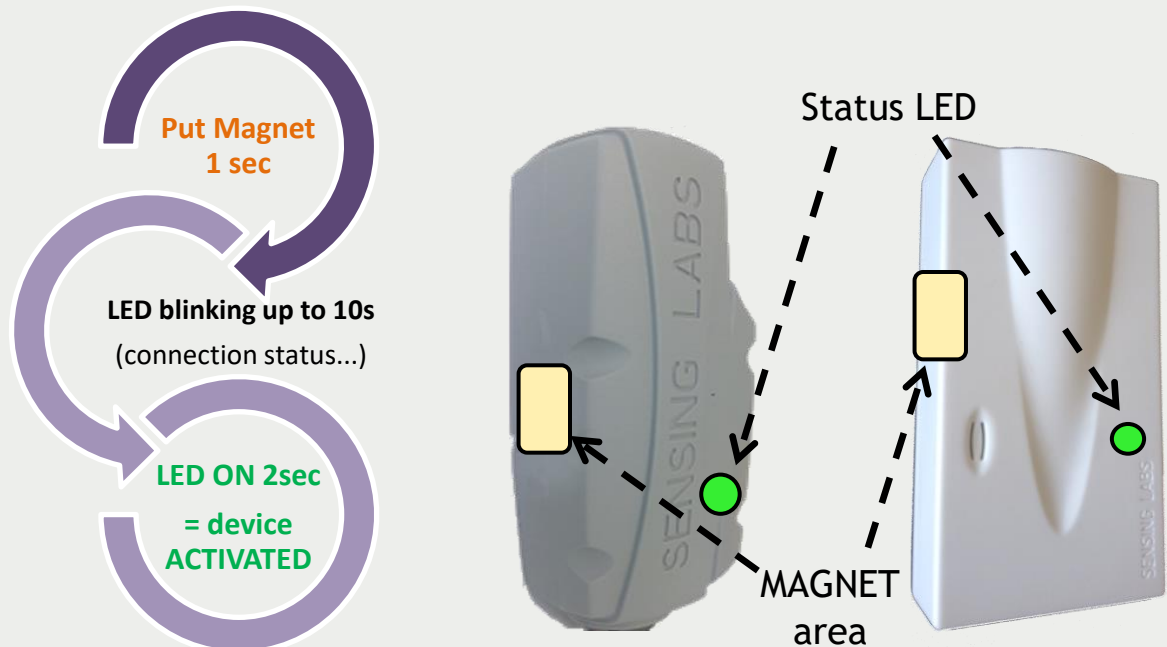


- ✓ Remove the magnet as soon as the LED flashes!
- ✓ If activation fails (No solid LED ON 2sec), Senlab will come back in storage mode.
- ✓ After successful activation, device will automatically send its START message



Once activated, if you pass the magnet one more time, the device will indicate its activation status after 3s LED blinking:

--> Solid LED ON 2sec will confirm that device is activated

LED Status meaning

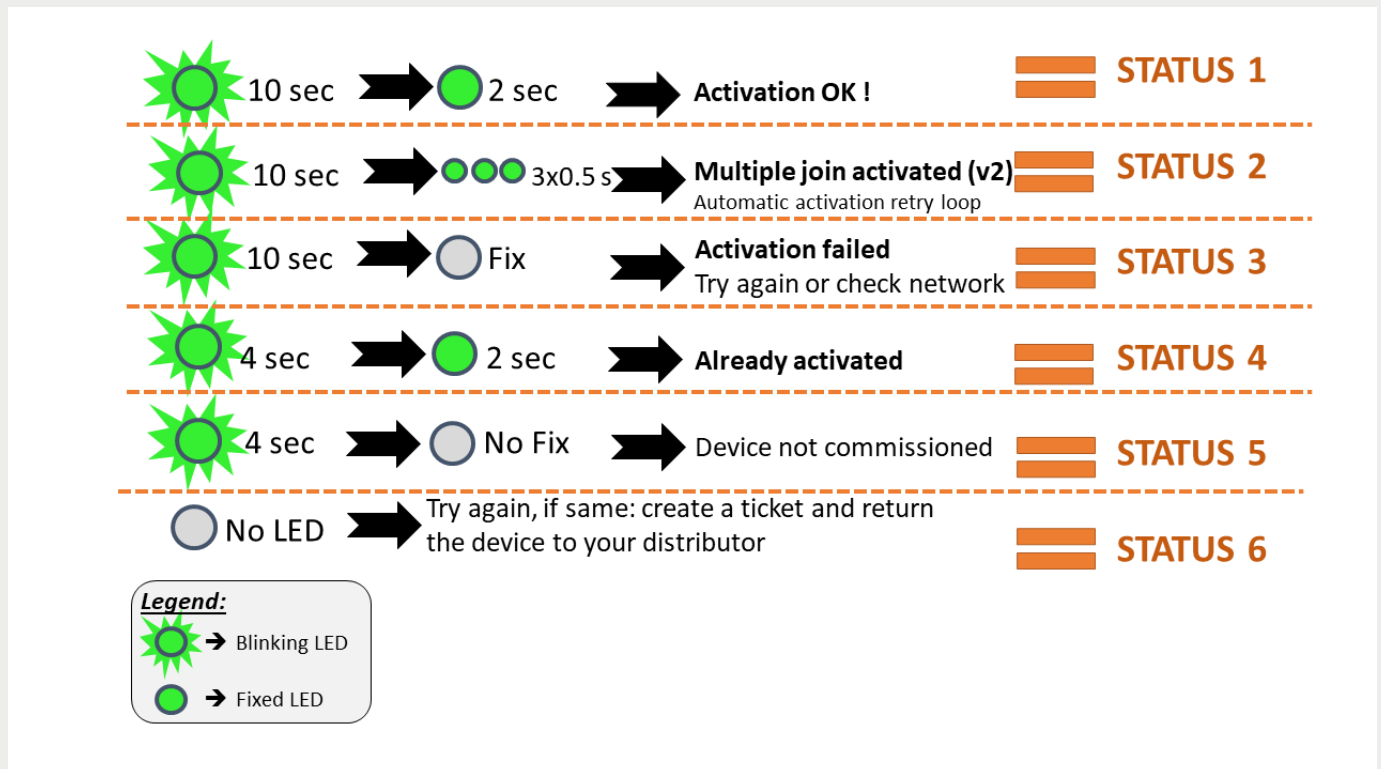

Deactivation of the device

If you decide to deactivate Senlab, no more transmissions will be sent → That means that you need a physical access to the Senlab to active it again.

Many ways are possible:

- **Over the Air:** by sending the downlink request "STOP application" (via your LoRaWAN system)
- **With physical access (with SLsetting tool):** by using SLsetting "disconnect" action
- **With physical access (only for test devices):** By holding the magnet during 20 seconds until the LED stay ON for 5 seconds.

Understand the two SenlabH functional modes


It is important to understand all modes in order to choose the best one to fit with your use case and environment.

All modes are switchable from one to each other Over The Air or with SLsetting tool.

Basic mode (or standard mode)

This mode allows to transmit periodically 1 measure (temperature and humidity):

- ✓ Measure period can be configured from 3min to 24h (Tx < 10min is for test only)

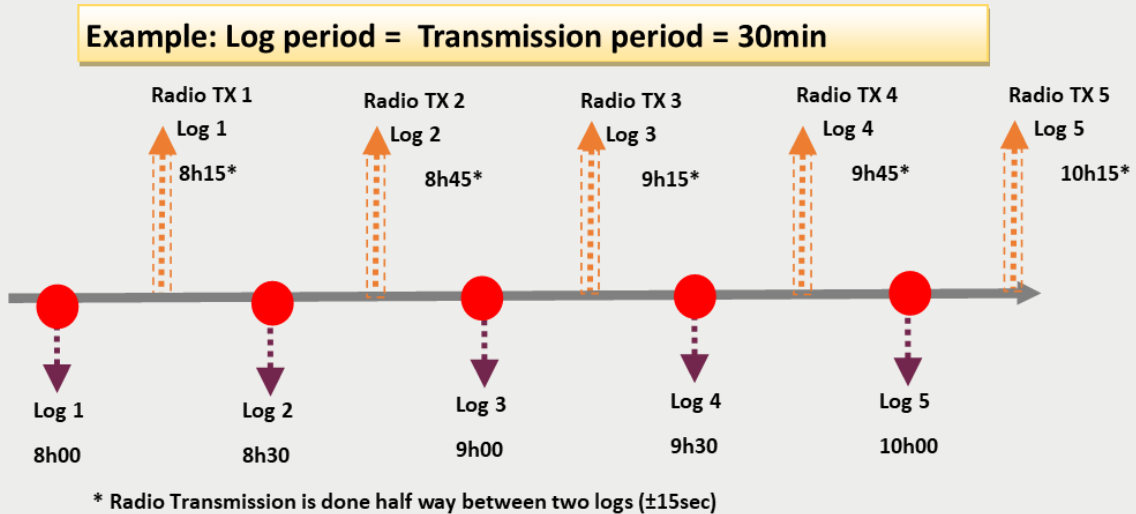


Availability	All firmware versions
Compatibility	<ul style="list-style-type: none"> ✓ Operated network ✓ SLgatewayV1 or V2 ✓ Third part gateway with SLcodecs or manual decoding
Advantages	<ul style="list-style-type: none"> ✓ "Manual" decoding possible (without SLcodecs) ✓ Over The Air reconfiguration
Typical use cases	<ul style="list-style-type: none"> ✓ Monitoring of physical value(s) with slow variation
What to configure?	<ul style="list-style-type: none"> ✓ Measure period (the transmission period will be the same)
How to get applicative data?	<ul style="list-style-type: none"> ✓ All SLgateway's APIs: refer to SLgateway user guide ✓ SLcodec : refer to SLcodec help ✓ By decoding payload yourself: Refer to « Application Note SenlabMessageFormat »

Datalog mode

This mode allows to transmit up to 23 periodic measures (temperature and humidity) in each message:

- ✓ Measure period can be configured from 1 min to 24h
- ✓ Transmission period can be configured from 3min to 24h (Tx < 10min is for test only)
- ✓ Possibility to activate a "log redundancy" feature to integrate previous logs in current transmission (ex: TX2 will contains logs n°1 to 6 and TX3 logs n°4 to 9)

Example: Log period = 15min / Transmission every 3 logs (≈45min)

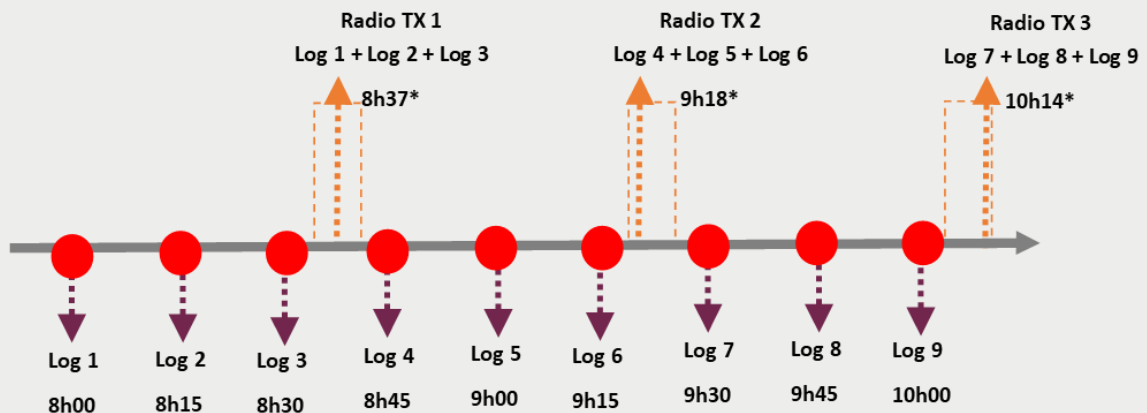

* Radio transmission is done « randomly » between the last log and the next one

Availability	All firmware versions
Compatibility	<ul style="list-style-type: none"> ✓ Operated network ✓ SLgatewayV1 or V2 ✓ Third part gateway with SLcodecs
Advantages	<ul style="list-style-type: none"> ✓ Log precision up to 1 log every minute and transmission by "datalog" to optimized battery life time ✓ Log redundancy feature to recover not received message Over The Air reconfiguration
Typical use cases	<ul style="list-style-type: none"> ✓ Monitoring of physical value(s) with fast variation ✓ Important battery life time
What to configure?	<ul style="list-style-type: none"> ✓ Measure period ✓ Transmission period (multiple of measure period)
How to get applicative data?	<ul style="list-style-type: none"> ✓ All SLgateway's APIs: refer to SLgateway user guide ✓ SLcodec: refer to SLcodec help

Application features (datalog mode)

This chapter describes the SenlabH application features available in datalog mode (accessible via SLbase or SLcodec – refer respective User Guide for more details)

Measure data

<u>ID</u>	<u>Description</u>	<u>Type</u>	<u>Unit</u>	<u>Range</u>
<i>temperature</i>	Measured temperature	FLOAT	°C	-47...+128
<i>humidity</i>	Measured relative humidity	INT8	%	0...100
<i>battery_current_level</i>	Battery level of the device	UINT8	%	1...100

Event data

<u>ID</u>	<u>Description</u>	<u>Type</u>	<u>Unit</u>	<u>Range</u>
<i>start_event</i>	Happens when device is restarted on the field	BOOL	-	-

Configuration requests

<u>Parameter ID</u>	<u>Description</u>	<u>Type</u>	<u>Unit</u>	<u>Range</u>
Datalog configuration (ID = request_write_datalog_cfg)				
<i>log_period</i>	Device will measure every X minutes	UINT16	Minute	1...1440 (1440= 24h)
<i>log_tx_period</i>	Device will send logged measure every X minutes (must be a multiple of log_period)	UINT16	Minute	3...1440
<i>log_tx_random_activation</i> (optional)	Maximize device datalog reliability	BOOL	-	-
<i>redundancy_factor</i>	Log-redundancy (since FW V1.3) Send the X n-1 last log(s) with the last log(s)	UINT8	-	1-12
Reset battery level (ID = request_reset_battery_level) <i>Must be used after battery replacement only</i>				
<i>NO PARAMETERS</i>				
Stop application (ID = request_stop_application) Warning: activation with magnet will be mandatory to reactivate the device				
<i>NO PARAMETERS</i>				
Get Version (since FW V1.3) (ID = request_get_version)				
<i>NO PARAMETERS</i>	Ask the device to return its configuration and FW version			



In order to take advantage of Senlab datalog mode, you need to use SLcodecs tool.

- Refer to the “SLcodecs Application Note” or contact us to get more information about SLcodecs integration and usage.


Thresholds overrun (FW >= V2.x.x)

(Refer to old User Guide for FW V1.X)

SenlabH embed a feature to monitor thresholds overrun. You can activate independently a high and a low threshold, with specific trigger & release temperature/humidity values.

- Check measure period and duration of threshold overrun are configurable
- The measure is transmitted in the alarm (nb of retransmission is configurable)
- Threshold overrun feature can be configured via SLsetting tool or over-the-air (downlink payload)
- Each measure (temperature and humidity) have is own threshold configuration

SenlabT FW 2.x Example : Differents Temperature detections

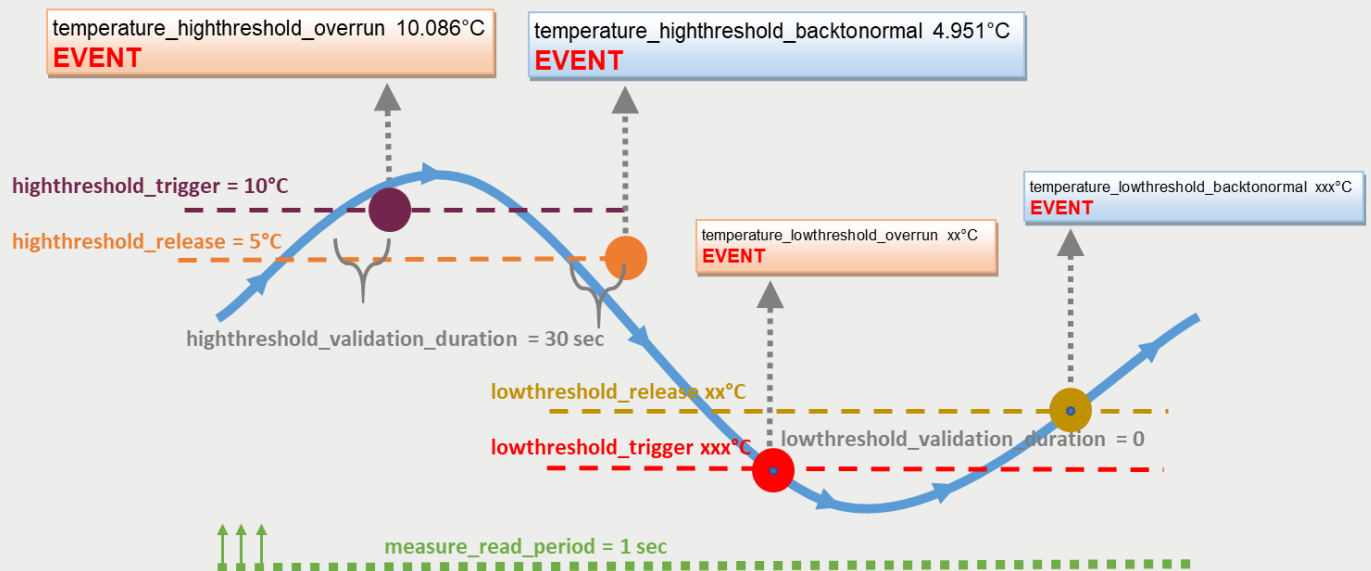

⇒ The concept of “detection” is the same for the “humidity”

Configuration requests

Online describe on <http://codec.sbase.io/senlabH>

<u>Parameter ID</u>	<u>Description</u>	<u>Type</u>	<u>Unit</u>	<u>Range</u>
	REQUEST ALARMS CONFIGURATION (ID = request_alarms_configuration)			
measure_read_period*	Temperature(s) read period for alarm detection <i>low value (<10sec) impacts battery life duration</i>	UINT16	sec	1..600
alarms_retransmissions_number*	Alarms retransmissions number	UINT8	-	0..3
temperature_highthreshold_activation*	Temperature high threshold activation	BOOL	-	
temperature_highthreshold_validation_duration	Temperature high threshold validation duration <i>Must be a multiple of measure_read_period</i>	UINT16	sec	1...65535
temperature_highthreshold_trigger	Temperature high threshold value that must be maintain the validation duration to trigger the alarm	FLOAT	°C	-47...+128
temperature_highthreshold_release	Temperature to release high threshold overrun (< to high trigger value and > to low release value)	FLOAT	°C	-47...+128
temperature_lowthreshold_activation*	Temperature high threshold activation	BOOL	-	
temperature_lowthreshold_validation_duration	Temperature high threshold validation duration <i>Must be a multiple of measure_read_period</i>	UINT16	sec	1...65535
temperature_lowthreshold_trigger	Temperature high threshold value that must be maintain the validation duration to trigger the alarm	FLOAT	°C	-47...+128
temperature_lowthreshold_release	Temperature to release high threshold overrun (< to high trigger value and > to low release value)	FLOAT	°C	-47...+128
humidity_highthreshold_activation*	Humidity high threshold activation	BOOL	-	
humidity_highthreshold_validation_duration	Humidity high threshold validation duration <i>Must be a multiple of measure_read_period</i>	UINT16	sec	1...65535
humidity_highthreshold_trigger	Humidity high threshold value that must be maintain the validation duration to trigger the alarm	UINT8	%RH	0...100
humidity_highthreshold_release	Humidity to release high threshold overrun (< to high trigger value and > to low release value)	UINT8	%RH	0...100
Humidity_lowthreshold_activation*	Humidity low threshold activation	BOOL	-	
Humidity_lowthreshold_validation_duration	Humidity low threshold validation duration <i>Must be a multiple of measure_read_period</i>	UINT16	sec	1...65535
Humidity_lowthreshold_trigger	Humidity low threshold value that must be maintain the validation duration to trigger the alarm	UINT8	%RH	0...100
Humidity_lowthreshold_release	Humidity to release low threshold overrun (< to high trigger value and > to low release value)	UINT8	%RH	0...100

(*) mandatory parameters

Event data (Alarm)

<u>ID</u>	<u>Description</u>	<u>Type</u>	<u>Unit</u>	<u>Range</u>
temperature_highthreshold_overrun	Notified if high threshold condition is triggered (temperature & duration)	FLOAT	°C	-45...+125
temperature_highthreshold_backtonormal	Notified if high threshold condition is released (temperature & duration)	FLOAT	°C	-45...+125
temperature_lowthreshold_overrun	Notified if low threshold condition is triggered (temperature & duration)	FLOAT	°C	-45...+125
temperature_lowthreshold_backtonormal	Notified if low threshold condition is released (temperature & duration)	FLOAT	°C	-45...+125
humidity_highthreshold_overrun	Notified if high threshold condition is triggered (humidity & duration)	UINT8	%RH	0...100
humidity_highthreshold_backtonormal	Notified if high threshold condition is released (humidity & duration)	UINT8	%RH	0...100
humidity_lowthreshold_overrun	Notified if low threshold condition is triggered (humidity & duration)	UINT8	%RH	0...100
humidity_lowthreshold_backtonormal	Notified if low threshold condition is released (humidity & duration)	UINT8	%RH	0...100

Battery replacement (Indoor version only)



Replacement battery must be a Lithium 3,6V AA type with 50mA min of supported continuous current → Contact your distributor to get original battery reference.

Senlab indoor have the capability to keep activation status during a few minutes, so the process is:

1. Open the casing
 2. Remove the old battery and, **during the same minute**, put the new battery
 3. Check if the device activation is still OK (see "Activation of the device" chapter)
 4. In case activation lost, you need to activate the device again
 5. Close the casing
1. Send the configuration request "request_reset_battery_level" to the device, using your application

ATTENTION:



EN: There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to instructions.

FR: Il y a risque d'explosion si la batterie est remplacée par une batterie de type incorrect. Mettre au rebut les batteries usagées conformément aux instructions.

Technical characteristics

ISM Radio bands usage

Senlab globally communicates over frequencies in the 865-870MHz radio band with a maximum transmission power of 25mW e.r.p (+14dBm e.r.p).

More precisely, the following table describes the different sub-bands, as defined per Annex 1 of ERC Recommendation 70-03 (13 October 2017), which can be used by Senlab:

Frequency Band		Power	Spectrum Access
h1.3	865-868MHz	25mW e.r.p	1% duty-cycle
h1.4	868-868.6MHz	25mW e.r.p	1% duty-cycle

Note that 1% duty-cycle for sub-band h1.3 is allowed by ERC/REC 70-03 Annex 1 Note 5 as its usage is limited to 865-868MHz.

V1.0.3 LoRaWan stack compliant

Senlab FW	LoRaWan stack compliant
1.1.X	V1.0.0
1.2.X / 1.3.X / 1.4.X	V1.0.1
2.0.X	V1.0.3

Nothing to configure for the user, no change for the application layer, but this information could be useful if you need to connect Senlab device to LoRaWan network.

More information on  **LoRa Alliance**[®]

LoRaWan Adaptive Data Rate (ADR)

Senlab devices are compatible with ADR and support from DR0 (SF12) to DR5 (SF7). For any problem with ADR, check the FAQ Senlab on [Help Center](#).

Electrical safety

All circuits are SELV (Safety extra low voltage), including interface circuits which are only used for measurement (signals without power, these circuits are considered LPS).

Ambient temperature of use

The ambient temperature of use depends of the version:

Indoor version	From 0°C to +55°C
Outdoor version	From -20°C to +70°C

Legals

SENSING LABS SAS reserves the right to make corrections, modifications, enhancements, improvements and other changes to its products and services at any time and to discontinue any product or service without notice.

SENSING LABS products is not authorized for use in safety-critical applications (such as life support) where a failure of the product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use.

Buyers confirm that they have all necessary expertise in the safety and regulatory ramifications of their applications, acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of the product in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by SENSING LABS SAS.

© 2021 SENSING LABS SAS. All rights reserved. Sensing Labs logo, are registered trademarks of SENSING LABS SAS. All other brands and product names mentioned in this document are the property of their respective holders.

This is a non-contractual document and specifications are subject to change at any time without notice.

For more information about this software:

website - <http://www.sensing-labs.com>

support – <http://support.sensing-labs.com>

Headquarters:

SENSING LABS SAS.

187 rue Hélène Boucher

34170 Castelnau-le-Lez

France

